

Industrial / Spectacles / 5X7

## 5X7 - High Contrast

Code: 5X7.03.00.04

Date: 27-04-26 1/2

5X7 is designed for a perfect integration with prescription glasses. The exclusive SoftPad technology, a high-strength insert combined with rod adjustments, ensure maximum stability even in extreme conditions.



## Frame mark (EU)

Mod.5X7 U EN166 FT U EN175 FT CE

## Lens mark (EU)

2-1.7 U 1 FT K N CE

## Frame technology

Overspec, Adjustment of temples in length, Rubber Terminal, Terminal tilting movement, SoftPad

## Conditions of use

UV525

## Lens technology

Anti-Scratch + Anti-Fog (KN - Vanguard PLUS), UV525

## Lens color

Orange

## Lens material

Polycarbonate

## Frame color

Black/Orange

## Standards

EN166, EN170

## Scale number

(2-1.7)

## Mechanical resistance

Low energy impact (F)

## Optional requirements

Resistance to surface damage by fine particles (K), Resistance to fogging of oculars (N), Protection against high speed particles at extreme temperatures -5°/+55° C (T)


## Optical class

Optical class (1)

## Weight

37g

>> <https://www.univetsafety.com/en/products/safety/spectacles/5x7/5x7-high-contrast/>

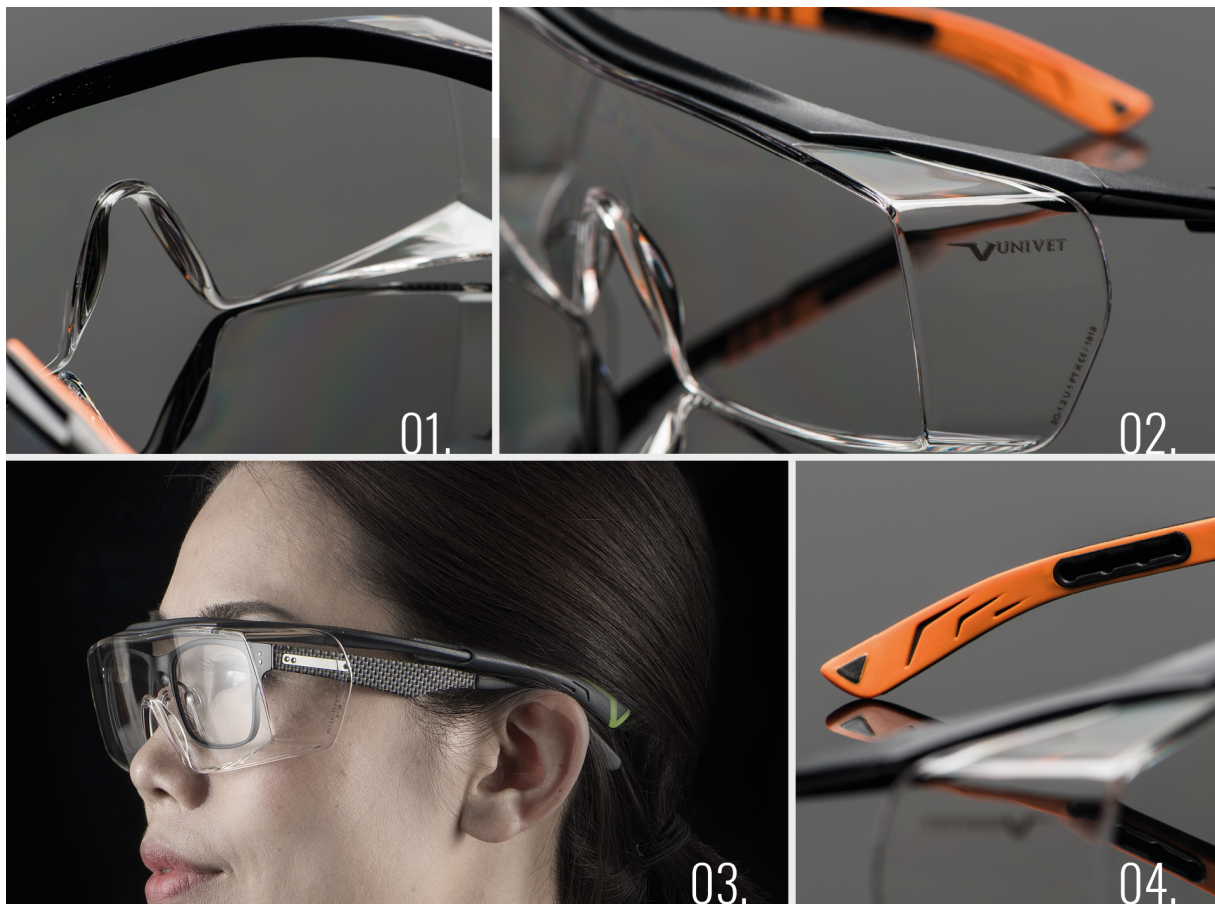

01.

**UPPER FRONTAL**

Grants comfort and stability with a shockproof effect

02.

**SIDE SHIELDS**

Improved peripheral protection even in combination with eyeglasses

03.

**NO TEMPLES OVERLAPPING**

Avoids the annoying overlapping of temples between the two glasses, for comfort and greater stability even in prolonged use

04.

**RUBBER TERMINAL WITH TILTING MOVEMENT & LENGTH ADJUSTMENT**

Allows to obtain the correct fit and work in constant safety

Attention! Any images on this page illustrate the frame technologies of the product family in question and may represent frame and lens colours that do not correspond to the product code of the following sheet.

**HEADQUARTERS**

Univet S.r.l. Via Giovanni Prati 87 25086 Rezzato - Telephone 030 2499411 - Fax 030 2499430 - info@univetsafety.com  
VAT. IT02506570163